

LIST OF ENERGIA LPG DIESEL DUAL FUEL COMPONENTS

	<p>ENR048.ECU.PRM.v01 - ENR048 Prime ECU-</p> <p>Diesel Dual Fuel controller</p>
	<p>ENR061.SW D / G switch</p> <p>D / G switch - located in the driver's cabin, indicates the operating status of the DDF system, gas level / pressure in the LPG/CNG tank, the ability to manually turn off and turn on the gas system</p>
	<p>ENR033.MAP.SENSOR</p> <p>Map sensor - intake manifold pressure and gas temperature pressure sensor. Values according to which the gas dose is corrected.</p>
	<p>ENR048.W.v1.44PRIME- ENR048 v1.44PRIME</p> <p>Electrical harnesses - electrical connections of signals controlling the engine operation with the controller, connections of autogas system devices.</p>
	<p>ENR014 EGT sensor</p> <p>EGT sensor - exhaust gas temperature measurement, data to the ECU controller</p>

**LIST OF ENERGIA
DIESEL DUAL FUEL COMPONENTS**

	<p>Fuse.Holder.001 -</p> <p>Fuse - protects the electrical installation of the DDF system</p>
	<p>LPG/CNG injectors Energia</p> <p>Gas injector - doses the appropriate dose LPG/CNG gas according to the signals from the ECU DDF controller</p>
	<p>ENRE000201- LPG/CNG filter with water and oil decanter 12/12 mm,</p> <p>Gas phase gas filter with a replaceable cartridge.</p>
	<p>Reducer LPG 09 Nordic XP, up to 500HP diesel engine</p> <p>LPG reducer - reduces and stabilizes the gas pressure from the LPG tank with an electric valve.</p>
	<p>ENR103 CZ.T.R.NTC.4K7-</p> <p>Reducer CNG temperature sensor</p>
	<p>24V / 12V converter,</p>

**LIST OF ENERGIA
DIESEL DUAL FUEL COMPONENTS**

	<p>copper pipe fi 8: 6m and 2m Gas LPG - connection of the tank refueling valve and LPG reducer, high pressure.</p>
	<p>flexible water pipe fi 16mm / 5m Combination of water circuit / engine cooling system with LPG reducer.</p>
	<p>ENR000122 - PL: gas fuel pipe fi12mm / 3m LPG / CNG Fuel flexible hoses - connection of the reducer with the filter, MAP sensor, injectors</p>
	<p>ENR000123 - PL: gas pipe fi 5mm / 1,m LPG / CNG, Flexible fuel lines - connection by injectors to the intake manifold.</p>
	<p>LPG gas level indicator, Sends the gas level signal to the D/G switch in the driver's cabin</p>

LIST OF ENERGIA DIESEL DUAL FUEL COMPONENTS

	<p>mechanical confection</p> <ul style="list-style-type: none"> - ENR087.200.01- brass nozzle screwed into the collector fi 6 mm, - ENR087.200.02- long brass nozzle screwed into the collector fi 6 mm, - ENR000126.1 - 7-11 mm screw clamps - ENR000126.1 - 12-22mm - ENR000126.2 - 16-27 mm - ENR0129 - aluminum tee water 19x16x19mm,
	<p>- ZT.200x4.8 op.100 –</p> <p>plastic band clamp 200x4.8 mm package 100 pcs. x1pcs,</p>
	<p>LPG tank -</p> <p>Not included in the DDF Prime kit.</p>
	<p>LPG filling valve</p> <p>NOTE : what type of valve is used in Peru</p> <p>Not included in the DDF Prime kit.</p>
	<p>LPG tank multivalve,</p> <p>We choose the diameter of the tank. We suggest using the Extra version with a fi 8 mm gas outlet, with a higher flow.</p> <p>Not included in the DDF Prime kit.</p>
 <p>NTP ¼ - 18 - 35,00</p>	<p>Interface USB Energia ENR045 – 18,00 EUR</p>

Thank You!



More Power, Longer
Distance!

